

MODEL NO:

3000

# CELLPHONE SOLUTIONS

This  
**Hands-Free System**  
fits **EVERY**  
cell Phone



UNIVERSAL MICROPHONE CLIP

PATENTED SURE FIT PLUG



MAGNETIC MOUNTING BRACKET



**PATENTS**

USA Pat# 5860824  
GERMANY Pat# 29706508.4  
CHINA Pat# EL 97250606.3  
TAIWAN Pat# 129546

## Model 3000

### Hands-Free Speakerphone

- One model works with any cellphone
- Your voice transmits over your own phone's microphone
- Powerful speaker system
- Volume control
- Tone control
- On / Off switch
- Power LED light
- Earphone jack
- Fused connector
- Flexible Shaft
- Patented sure-fit plug




PRINTED IN HONG KONG

## MODEL 3000 QUICK START INSTRUCTIONS

- Determine best place to mount the magnetic mounting bracket in the vehicle, and the oval metal piece on the cellphone (**REFER TO COMPLETE INSTRUCTIONS INSIDE BEFORE MOUNTING**).
- Turn the Model 3000 off (on/off switch is under tone control) and insert adjustable cig. lighter connector into cig. lighter socket, and turn the adjusting wheel clockwise to create firm fit without over tightening (*loosen when removing unit*).
- If needed bend the flexible shaft so the speaker faces forward or up to project sound toward you.
- Attach the universal microphone clip to the speaker of your cellphone, a firm fit directly over the speaker is required for best incoming sound. Squeeze both sides of the clip until it clicks into place securely (soft rubber clip piece must be on bottom of phone, microphone cup over speaker). To release press red button on side of clip. (See FIG.II).
- Place cellphone in mounting bracket, with oval metal piece directly in the slot for secure fit. *Use release button on the mounting bracket to remove the cellphone.*
- *To make and receive calls*, turn on the on/off switch, the red LED lights up indicating power (in some vehicles the key must be turned on for the lighter socket to have power).
- Begin with your cellphones volume at maximum (with most phones you need to make a call to adjust the volume), and the Model 3000's volume and tone around mid-point.
- *To adjust sound*: balance the Model 3000's volume control and tone control (moving tone toward treble will increase volume, but may create *howling effect* with some phones, turn back toward bass to eliminate it). Also adjusting your cellphones volume level up or down will help achieve best incoming sound. Repositioning the speaker can also eliminate howling effect if it occurs.
- If the *other party* reports *their voice echoing*, eliminate echo by: turning tone control toward bass, and/or reducing the cellphone and/or Model 3000 volume slightly, and/or repositioning the Model 3000's speaker. *If this doesn't work it may be echo from the network, sometimes heard especially on digital networks and which you would hear if speaking directly on the phone, in that case end the call and call back for a clear connection.*


### FEATURES INDICATION

■ FIG.I

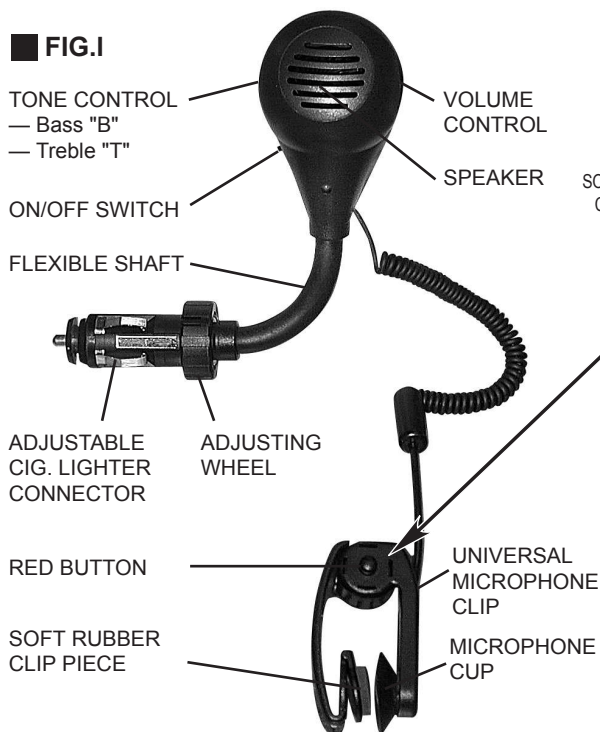


### ATTACH THE UNIVERSAL MICROPHONE CLIP TO THE SPEAKER OF YOUR CELLPHONE

■ FIG.II

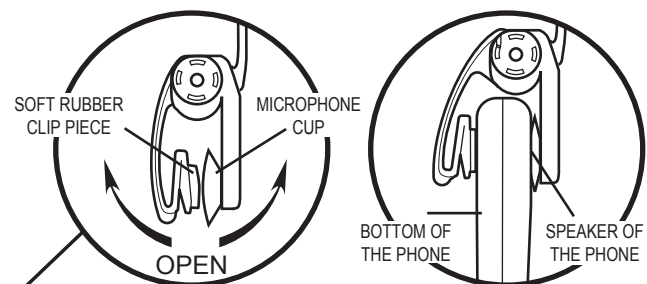

■ FIG.III

### SIDE VIEW OF THE MAGNETIC MOUNTING BRACKET

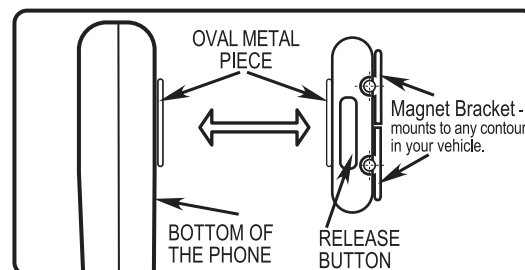

### Install Cellphone Magnetic Mounting Bracket: (See FIG.III)

- Determine best place to mount bracket on your dash, console, or elsewhere. Clean area with rubbing alcohol. When dry remove adhesive covers from back of bracket, carefully place mount precisely where you want it and apply pressure. Be sure to take into account the position of the oval opening which must line up with the oval metal piece you will mount on the back of your phone or battery (two are provided for your convenience).
- Using the alcohol clean the mounting area for the oval metal piece on the back of your phone or battery, let dry, then mount it, applying pressure for best grip.